

# USER MANUAL

## STRIP WARMER



**MODEL: SW24, SW36, SW48, SW60**



USR Brands, Inc.

Phone: 800-764-1172 | [www.usrestaurant.com](http://www.usrestaurant.com) | [sales@usrestaurant.com](mailto:sales@usrestaurant.com)

## Please read and keep this instruction manual. Indoor use only!

### INTRODUCTION

1. Please read instructions before using this appliance.
2. When using this appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after all uses following cleaning instructions below.

### ELECTRICAL REQUIREMENTS

1. Wire warmer into a grounded circuit with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the warmer for voltage and wattage requirements.
2. All electrical connections must be made according to local codes by a licensed electrician.

### ELECTRICAL SPECIFICATION

Model	Dimension	Voltage	Frequency	Watt	Weight
SW24	24"L x 6.18"W x 2.63"H	120V	60HZ	500W	7 lbs
SW36	36"L x 6.18"W x 2.63"H	120V	60HZ	850W	10 lbs
SW48	48"L x 6.1/8"W x 2.63"H	120V	60HZ	1200W	14 lbs
SW60	60"L x 6.1/8"W x 2.63"H	120V	60HZ	1550W	16 lbs

### SAFETY INSTRUCTIONS

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Never leave the unit unattended while it is working.
4. Always turn the power off at the circuit breaker before cleaning, adjusting or maintaining this machine.
5. Do not operate any appliance after it malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors. This appliance is not intended for use in wet or moist locations. Never locate appliance where it may fall into water.
7. To prevent a possible fire, it is recommended that the unit is installed above a non-combustible surface.
8. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

## INSTALLATION

1. Use MOUNTING BRACKET supplied with the warmer. Install with the following clearances: 9" min. between end of unit and any wall, 12" min. between side of unit and any wall, 16" min. between bottom of unit and counter, and 1 7/8" min. between top of unit and overhead surface.
2. This unit radiates heat when in use therefore we recommend that the unit be installed above a non-combustible surface.

## OPERATION

1. For strip warmers of high wattage (18-25 watts per inch), 10-16" is the recommended mounting height.
2. Do not install food warmers above or around combustible surfaces.
3. Food warmers can be mounted to the underside of a shelf with a minimum gap of 1" to protect electrical system.
4. Remove the two center screws from end plates. Align the holes on the bracket with the mounting holes on the end plate. Use the screw to secure the bracket.
5. Drill 4 holes on the underside of a shelf, use fasteners to install the brackets to the underside of the shelf.
6. Place food products in a pan located directly under the warmer for best results.
7. Turn warmer off when not in use.

## CLEANING


**NOTE:** Proper maintenance plays an important part in the life span and functioning of the warmer.

1. Turn warmer off before cleaning.
2. Do not immerse in water or other liquid. Avoid splashing water into unit.
3. The housing and reflectors are made of stainless steel, which can be kept clean by use of a damp sponge and soap solution.

## TROUBLESHOOTING

No Heat	Check that power switch is turned "ON".
	Check power at heater.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

# Wiring Diagram

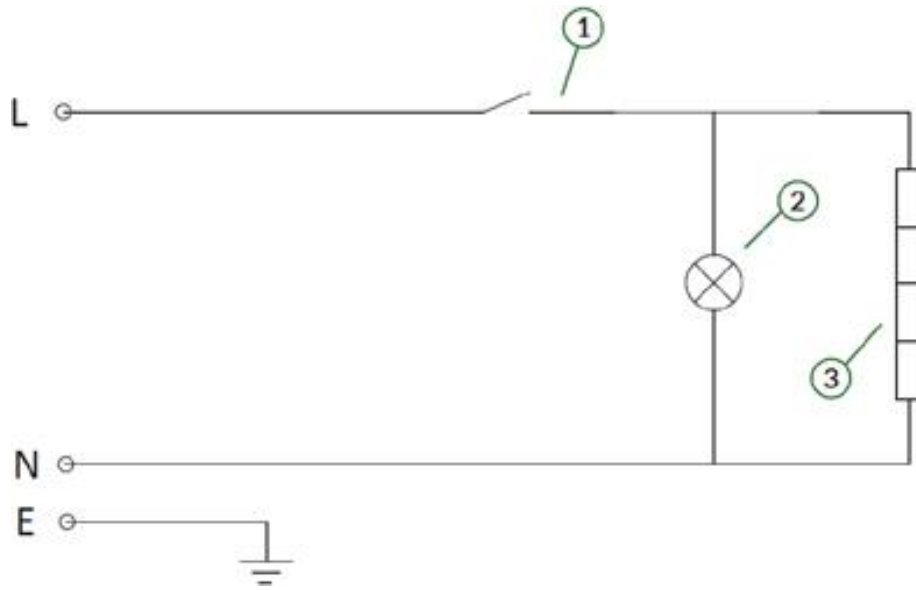

S/N	Description
1	Toggle switch
2	Heating lamp
3	Heating element